

LEFT SIDE COVER


The left side cover must be removed for seat removal, or to service the fuse or battery maintenance.

Removal:

1. Remove the bolts (1) and clip (2).
2. Pull out the left side cover (3).

Installation:

1. Position the left side cover so the prong (4) is aligned with the frame grommet (5).
2. Push the left side cover in place.
3. Install the securing bolts and tighten them.
4. Install the clip.

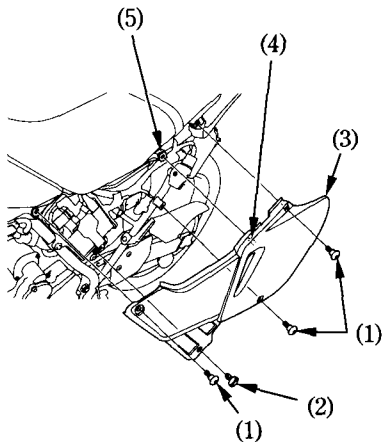

(1) Bolts

(2) Clip

(3) Left side cover

(4) Prong

(5) Grommet