


## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Remove the wheel nuts (1).
3. Remove the wheel.

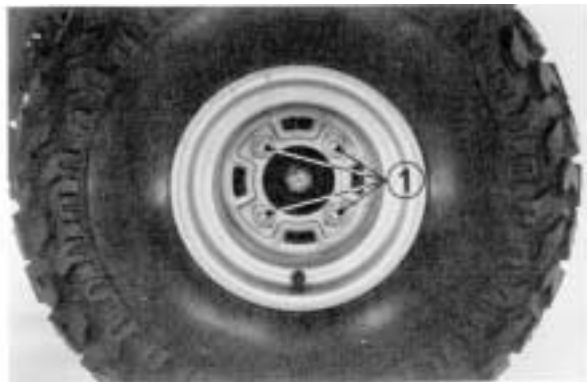

(1) Wheel nuts

## Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 50–60 N·m (5.0–6.0 kg·m, 36–43 ft·lb).

### **WARNING**

*\* If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*