


FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Place the motorcycle on its side stand with the transmission in neutral and the ignition switch off.
2. Make the handlebar straight.
3. Remove the side cover (page 86).
4. Remove the bolts (1).
5. Pull up the rear end of the fuel tank and release the tank from the cushion rubbers (2) on the frame.

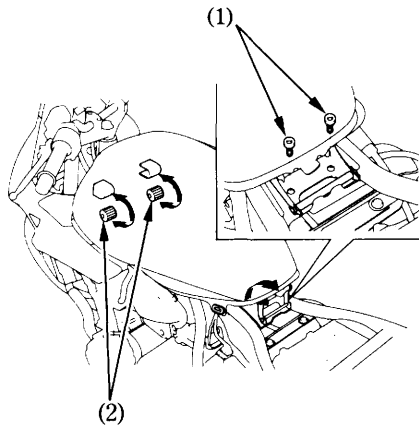

- (1) Bolts
(2) Cushion rubbers