


## Position Light Bulb

(Except U type)

### CB1300S/SA


1. Remove the lower cowl (page 87 ).
2. Pull the position light socket (1) and remove it.
3. Pull out the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

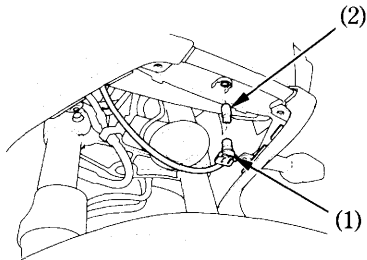

- (1) Socket  
(2) Position light bulb

## CB1300/A

1. Remove the headlight (1) (page 158).
2. Pull out the socket (2).
3. Slightly press the bulb (3) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

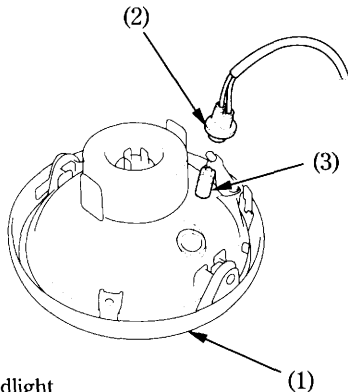

- (1) Headlight  
(2) Socket  
(3) Position light bulb