

WHEEL REMOVAL

Refer to the Safety Precautions on page 108.

When removing and installing the wheel, be careful not to damage the sensor and pulser ring (Model equipped with ABS).

(Except BR type)


This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. **CB1300A/SA**
Remove the speed sensor guide (1) from the right fork leg by removing the bolts (2).
3. Cover both sides of the front wheel with a protective tape (3) or equivalent.

4. Remove the right and left caliper assemblies (4) from the fork leg by removing the fixing bolts (5).

To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

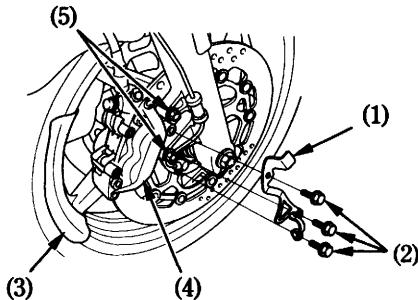

- (1) Speed sensor guide
- (2) Bolts
- (3) Protective tape
- (4) Brake caliper assembly
- (5) Fixing bolts