


FUSE REPLACEMENT

(Refer to the maintenance precautions on page 47).

The main fuse (1), located on the starter magnetic switch (2) under the seat, is 20 A.

The fuse box (3) is located under the seat.

The spare fuses (4) are located near the fuse box.

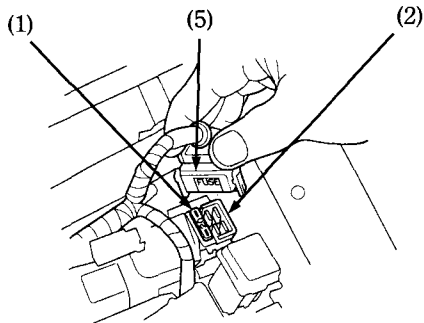

(1) Main fuse

(5) Wire coupler

(2) Starter magnetic switch


When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat (see page 30), disconnect the wire coupler (5) and remove the old fuse.

Install a new fuse and reconnect the wire coupler.

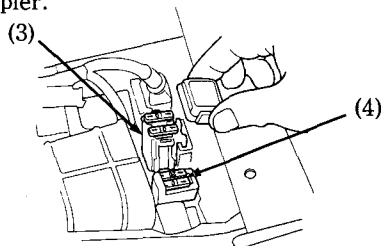

(3) Fuse box

(4) Spare fuses