

MAINTENANCE

| Page | |
|-----------|--------------------------------------|
| 71 | MAINTENANCE |
| 71 | The importance of Maintenance |
| 72 | Maintenance Safety |
| 73 | Safety precautions |
| 74 | Maintenance Schedule |
| 77 | Tool kit |
| 78 | Serial Numbers |
| 79 | Colour Label |
| 80 | Engine Oil |
| 86 | Crankcase Breather |
| 87 | Spark Plug |
| 88 | Throttle Operation |
| 89 | Idle Speed |
| 90 | Air Cleaner |
| 91 | Coolant |
| 92 | Drive Chain |
| 97 | Drive Chain Slider |
| 98 | Front and Rear Suspension Inspection |
| 99 | Side Stand |
| 100 | Wheel Removal |
| 107 | Brake Pad Wear |

| Page | |
|------|-------------------------------|
| 109 | Battery |
| 111 | Fuse replacement |
| 116 | Brake light switch adjustment |
| 117 | Bulb replacement |

124 CLEANING

128 STORAGE GUIDE

| | |
|-----|----------------------|
| 128 | Storage |
| 130 | Removal from Storage |

131 SPECIFICATIONS

135 CATALYTIC CONVERTER