


## AIR CLEANER

(Refer to the maintenance precautions on page 54).


The air cleaner should be serviced at regular intervals (page 49). Service more frequently when riding in unusually wet or dust areas.

1. Remove the right side cover.
2. Remove the air duct by removing screws (1).

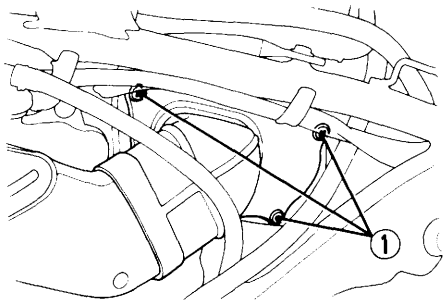

(1) Screws

3. Pull out the retainer (2) and air cleaner element (3).
4. Discard the aircleaner element and install a new element.
5. Install the parts in reverse order of removal.

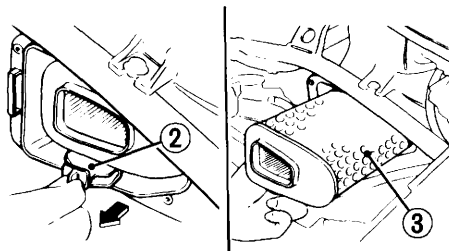

(2) Retainer  
(3) Air cleaner element