

Spring preload adjustment :


The spring preload adjuster (1) has 22 positions to turn it with a 8 mm box wrench and handle grip provided in the tool box.

The adjuster is located behind the right side cover.

The standard position: **LOW**

To reduce preload—turn the adjuster counterclockwise.

To increase preload—turn the adjuster clockwise.

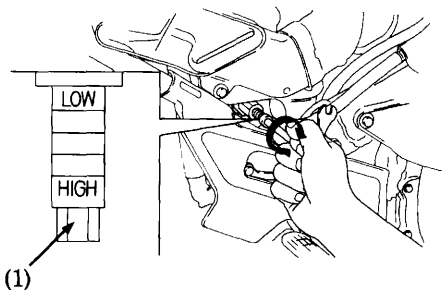

(1) Spring preload adjuster