

## SPARK PLUGS


(Refer to the maintenance precautions on page 59).

Recommended plugs:

Standard:

DPR9EA-9 (NGK) or  
X27EPR-U9 (NIPPONDENSO)

1. Remove the seat (see page 38).
2. Remove the fuel tank front mount bolts (1) and washer (2).

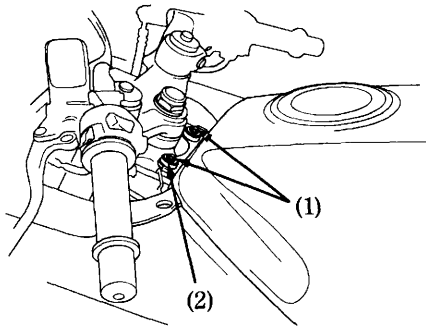

- (1) Mount bolts  
(2) Washer