

Front/Rear Turn Signal Bulb

▲WARNING

- * **The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.**

CAUTION:

- * **Wear clean gloves while replacing the bulb.**
- * **If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.**

NOTE:


- * **Be sure to turn the ignition switch OFF when replacing the bulb.**

〈FRONT〉

1. Remove the lid (page 41).
2. Turn the socket (1) 90° counterclockwise, then pull it out toward you.
3. Slightly press down on the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

NOTE:

- * **Do not use bulbs other than that specified.**
- * **After installing a new bulb, check that the light operates properly.**

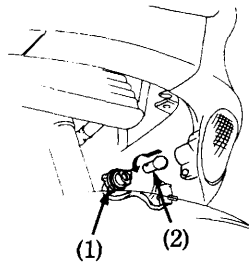

(1) Socket

(2) Bulb