


Fuse Box:

The fuse box is located behind the left middle cowl.

The specified fuses are:

10A, 20A

1. Remove the left middle cowl (page 72).
2. Open the rubber cover (1) and the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuses (3) are located in the fuse box.
4. Close the fuse box cover and the rubber cover.
5. Install the left middle cowl.

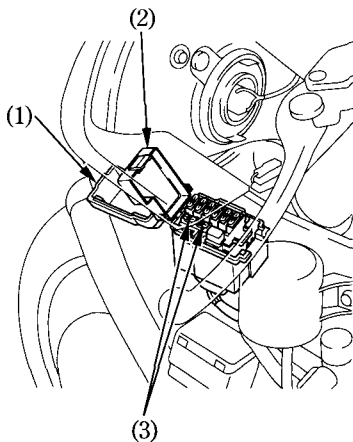

- (1) Rubber cover
- (2) Fuse box cover
- (3) Spare fuses