

## Coolant Temperature Meter

The coolant temperature meter (1) shows coolant temperature digitally.

### Temperature Display

Below 34°C	“— —” is displayed.
Between 35°C and 121°C	Actual coolant temperature is indicated.
Between 122°C and 131°C	Actual coolant temperature is indicated and flashed.
Above 132°C	The display will remain on and flash “132°C”.



(1)

(1) Coolant temperature meter