

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [ NOTE (1) ]								REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
				6	12	18	24	30	36			
				EVERY 1,000 km (600 mi) I, L								115
						I		I		I	121	
		NOTE (3)			I	I	R	I	I	R	47	
					I	I	I	I	I	I	132	
				I		I		I		I	47	
*						I		I		I	140	
*						I		I		I	82	
				I	I	I	I	I	I	I	50	
**				EVERY 24,000 km (16,000 mi) I								—
						I		I		I	123	
*						I		I		I	122	
*				I		I		I		I	—	
**						I		I		I	—	
**				I		I		I		I	—	