

## LOWER COWL


The lower cowl must be removed to adjust the clutch lever freeplay and to change the oil filter.

### Removal:

1. Remove the bolts A (1) and bolts B (2).
2. Remove the lower cowl (3) carefully in the procedure shown in the illustration, then pull out the tubes (4).

### Installation:

- Installation can be done in the reverse order of removal.
- Route the tubes through the opening of the lower cowl.

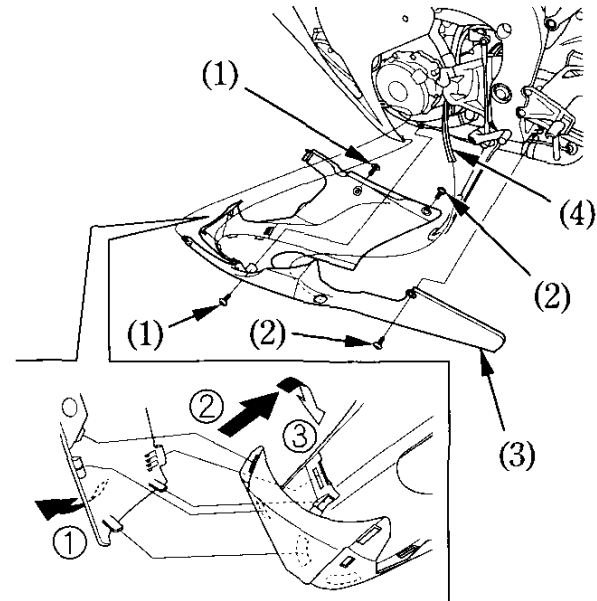

(1) Bolts A

(2) Bolts B

(3) Lower cowl

(4) Tubes