

MAINTENANCE

page

76 MAINTENANCE

- 76 THE IMPORTANCE OF MAINTENANCE
- 77 MAINTENANCE SAFETY
- 78 SAFETY PRECAUTIONS
- 79 MAINTENANCE SCHEDULE
- 82 TOOL KIT
- 83 SERIAL NUMBERS
- 84 COLOUR LABEL
- 85 ENGINE OIL
- 91 SPARK PLUGS
- 96 THROTTLE OPERATION
- 97 IDLE SPEED
- 98 COOLANT
- 99 DRIVE CHAIN
- 105 DRIVE CHAIN SLIDER
- 106 FRONT AND REAR SUSPENSION INSPECTION
- 107 SIDE STAND
- 108 WHEEL REMOVAL
- 116 BRAKE PAD WEAR
- 118 BRAKE SYSTEM INSPECTION

page

- 119 BATTERY
- 121 FUSE REPLACEMENT
- 124 STOPLIGHT SWITCH ADJUSTMENT
- 125 BULB REPLACEMENT

131 CLEANING

136 STORAGE GUIDE

- 136 STORAGE
- 138 REMOVAL FROM STORAGE

139 SPECIFICATIONS

143 CATALYTIC CONVERTERS

< Except BR type >

144 NOISE CONTROL SYSTEM (AUSTRALIA ONLY)