


LOWER COWL


Removal:

1. Remove the bolts A (1) and bolts B (2).
2. Remove the clip A (3).

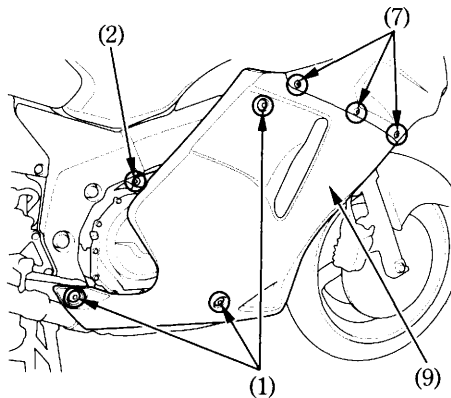

- (1) Bolts A
(2) Bolts B
(3) Clip A

- (7) Bolts D
(9) Right lower cowl

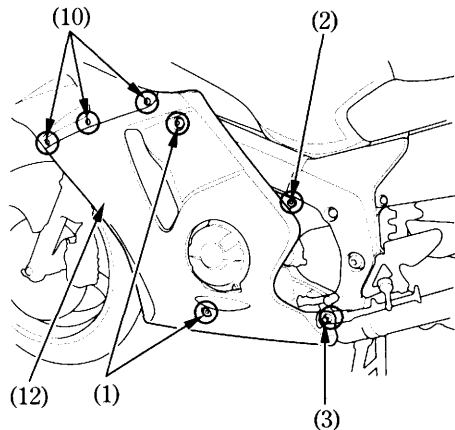

- (10) Bolts E
(12) Left lower cowl