

CLEANING

Clean your motorcycle regularly to protect the surface finishes and inspect for damage, wear, and oil, coolant or brake fluid leakage.

CAUTION:


*** High pressure water (or air) can damage certain parts of the motorcycle.**

Avoid spraying high pressure water (typical in coin-operated car washes) at the following areas:

- Wheel Hubs
- Ignition Switch
- Throttle body
- Brake Master Cylinders
- Clutch Master Cylinder
- Instruments
- Handlebar Switches
- Muffler Outlet
- Under Fuel Tank
- Drive Chain
- Under Seat
- Air Intake

NOTE:

*** Do not apply the pressured water directly to the air intake. The water can be drawn into the throttle body and/or enter the air cleaner.**

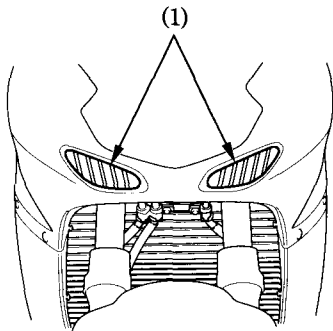

(1) Air intake