

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲ WARNING

*** If the Pre-ride Inspection (page 44) is not performed, severe personal injury or vehicle damage may result.**

SUSPENSION

Front Suspension


Spring preload:

To reduce (SOFT) :

Turn the adjuster counterclockwise to SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise to HARD for a firmer ride and rough road condition.

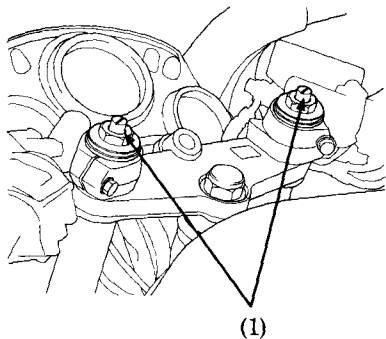

(1) Adjuster