

(Ref.No.) Description	Function
(1) Tachometer	Shows engine rpm.
(2) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: * Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(3) Fuel indicator	Lights when there is only few fuel left in the tank. The amount of fuel left in the tank when lights and with the vehicle set upright is approximately: 3.5 ℓ (0.92 US gal , 0.77 Imp gal)