


Initial Display

When the ignition switch is turned ON, the red information indicator lights, and both the multi-function display and coolant temperature meter will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The unit “mph” (1) will be displayed only for E type.

Both digital clock and tripmeter will reset if the battery is disconnected.

Multi-function display

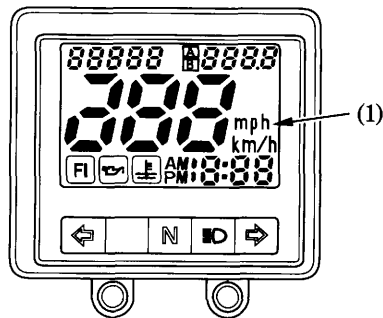

Coolant temperature meter



(1) “mph”