


## Coolant Temperature Meter


Coolant temperature meter (1) shows coolant temperature digitally.

### Temperature display


Below 34°C	“— —” is displayed.
Between 35°C and 132°C	Actual coolant temperature is indicated.
Above 132°C	The display will remain “132°C”

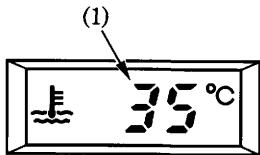

(1) Coolant temperature meter

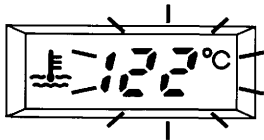

(2) Coolant temperature indicator

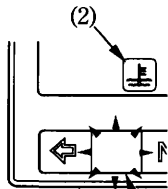

(3) Information indicator

## Overheating message

When the coolant temperature reaches 122°C, the display begins to flash. At the same time, the coolant temperature indicator (2) goes on and the red information indicator (3) lights.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 36 – 37 and do not ride the motorcycle until the problem has been corrected.

### CAUTION:

**\* Exceeding maximum running temperature may cause serious engine damage.**