

SPARK PLUGS

(Refer to the maintenance precautions on page 78).

Recommended plugs:

Standard:

IUH27D (DENSO)


For cold climate: (Below 5 °C, 41 °F)

IUH24D (DENSO)

This motorcycle uses the spark plugs that have a iridium coated center electrode. Be sure to observe the following when servicing the spark plugs.

- Do not clean the spark plug. If the electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- Use only “wire-type feeler gauge” to check the spark plug gap to prevent damaging the iridium coating of the center electrodes. Never use “leaf-type feeler gauge”.
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

1. Remove the middle fairing (page 59) and the lower fairing (page 60).
2. Disconnect the radiator fan connector (1).
3. Disconnect the thermo switch connector (2).
4. Remove the nut (3) and lower radiator mounting bolt (4).
5. Remove the upper radiator mounting bolt (5).

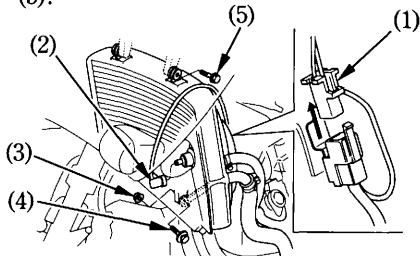

- (1) Radiator fan connector
- (2) Thermo switch connector
- (3) Nut
- (4) Lower radiator mounting bolt
- (5) Upper radiator mounting bolt