


Speed, Mileage and Fuel Mileage Unit Change (E type only)

The speedometer displays either “km/h” or “mph”.

The odometer/tripmeter displays either “km” or “mile”.

The fuel mileage meter displays either “km/l” or “mile/l”. Push the right control button (1) to select “km/h”/“km”/“km/l” or “mph”/“mile”/“mile/l”.

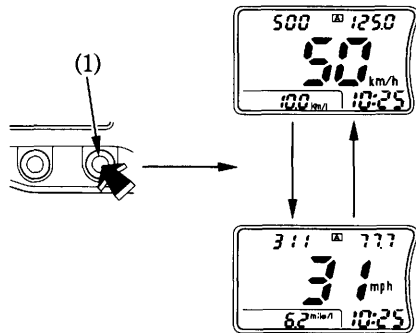

(1) Right control button