


Crankcase Breather

Refer to Safety Precautions on page 45.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle.

LEFT SIDE

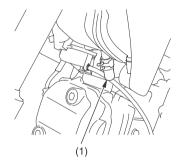

(1) crankcase breather tube

72 Servicing Your Honda

• Drain the deposits into a suitable container by pinching the crankcase breather tube (1).

