

## Fuel Tank


The fuel tank capacity including the reserve supply is:

5.0 ℓ (1.32 US gal, 1.10 Imp gal)

To open the fuel fill cap (1), pull the breather tube (2) from the front number plate (3). Turn the fuel fill cap counterclockwise.

Do not overfill the tank. There should be no fuel in the filler neck (4).

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise. Insert the breather tube into the front number plate.

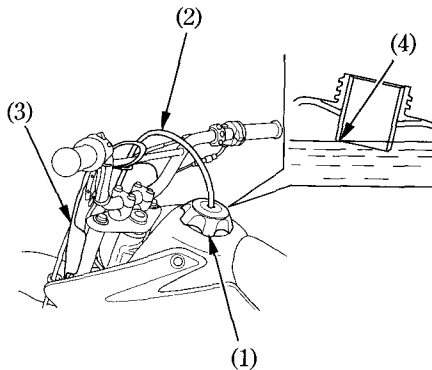

## **⚠ WARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.

- |                   |                        |
|-------------------|------------------------|
| (1) Fuel fill cap | (3) Front number plate |
| (2) Breather tube | (4) Filler neck        |