



**Ignition Switch**

Switches the electrical system on/off, locks the steering.

▶ Key can be removed when in the OFF or LOCK position.

**Steering Lock:** ➡ P. 31

**AT/MT switch**

To shift between the AT MODE and MT MODE.

➡ P. 40

**Engine stop switch**

Should normally remain in the (Run) position.

▶ In an emergency, switch to the (Off) position to stop the engine.

 **Horn button**

**N-D switch**  
To shift between Neutral and AT MODE. ➡ P. 40

 **Start button**