


## Right Under Cowl

CTX700D only

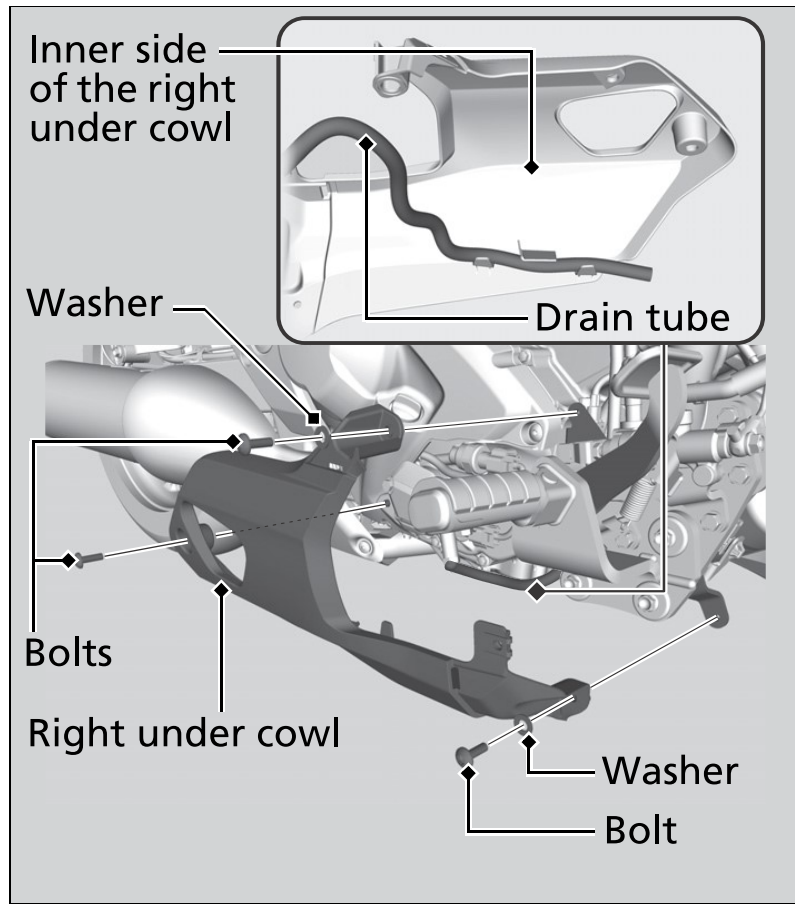

The right under cowl must be removed to service the clutch oil filter.

### Removal

1. Remove the right under cowl lid. ► P. 65
2. Remove the centre lower cowl. ► P. 66
3. Remove the bolts and washers.
4. Remove the right under cowl by releasing the drain tube.

### Installation

1. Route the drain tube inner side of the right under cowl as shown in the image.
2. Install the parts in the reverse order of removal.