


Maintenance Indicator

When the mileage on your scooter approaches the specified maintenance interval to change the engine oil, the maintenance indicator (1) will change from green to red. After replacing the engine oil, reset the indicator by inserting the key (2) in the slot (3) below the indicator.

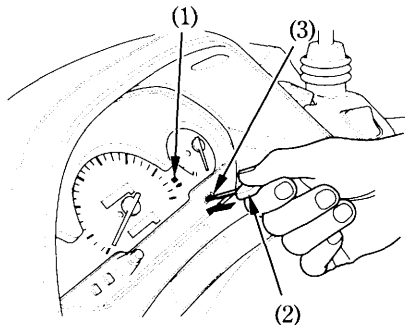

- (1) Maintenance indicator
- (2) Key
- (3) Slot

NOTE:

- * The indicator changes from green to red after the scooter has been ridden about 3,000 km (2,000 miles). Therefore, after the initial oil change (1,000 km, 600 miles) has been made, be sure to reset the indicator so the next specified maintenance will be indicated at the proper mileage.