

MAJOR COMPONENTS (Information you need to operate this scooter)

▲ WARNING


* If the Pre-ride Inspection (page 46) is not performed, severe personal injury or vehicle damage may result.

SUSPENSION

The spring preload adjuster (1) has 5 spring preload positions for different load or riding conditions.

Use the pin spanner to adjust the rear shock. Position 1 is for light loads and smooth road conditions.

Positions 2 to 5 increase spring preload for a stiffer rear suspension and can be used when the motorcycle is more heavily loaded. Standard position : 2

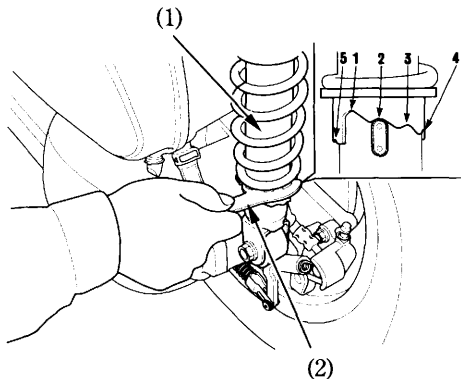

- (1) Shock absorber
- (2) Pin spanner