


Adjustment:

1. Place the scooter on its center stand.
2. Measure the distance the rear brake lever (1) move before the brake starts to take hold.


Free play at the tip of the brake lever should be:

20 – 30 mm (0.8 – 1.2 in)

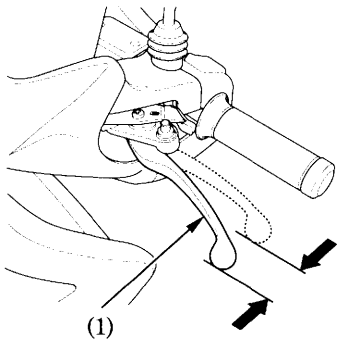

(1) Rear brake lever

If adjustment is necessary, turn the rear brake adjusting nut (2).

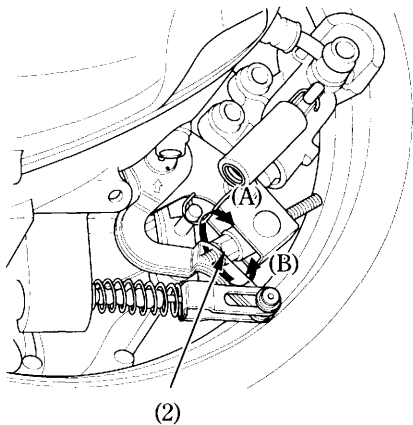

(2) Adjusting nut

(A) Decrease free play

(B) Increase free play