

## FRONT COMPARTMENT

Front compartments are located on both sides of the scooter.


To open the right compartment cover (1), pull the upper side of the cover.

To open the left compartment cover (2), insert the ignition key (3), turn it clockwise and open the cover.


### NOTE:

- \* Make sure the compartment covers are closed before riding.
- \* When washing your scooter be careful not to flood this area with water.

Right compartment

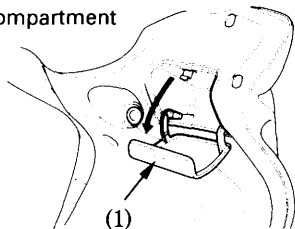

Left compartment

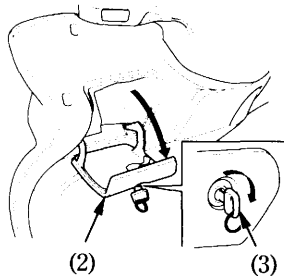

- (1) Right compartment cover
- (2) Left compartment cover
- (3) Ignition key