


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the knob (1) in or out as necessary.

Remove the front cover (page 85) to adjust head-light aim.

Obey local laws and regulations.

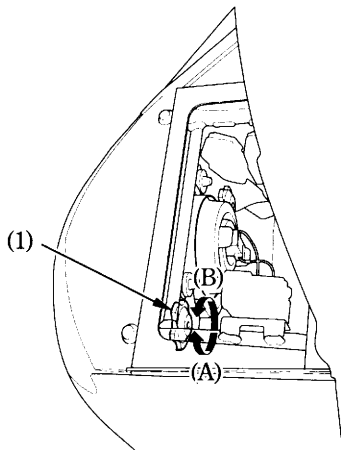

(1) Knob

(A) Up

(B) Down