


4. Squeeze the rear brake lever.

▲WARNING

*** The rear wheel will spin if not restrained by the brake or by contact with the ground. Accidental contact with a spinning rear wheel could cause personal injury.**

NOTE:

*** The electric starter will only work when the rear brake lever is squeezed and the side stand is up.**

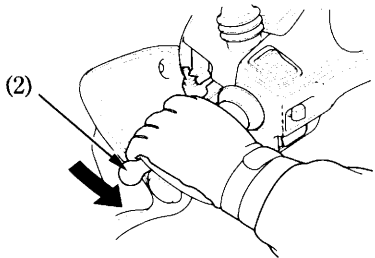


(2) Rear brake lever

5. With the throttle closed, push the starter button (3). Release the starter button as soon as the engine starts.

NOTE:

*** Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.**

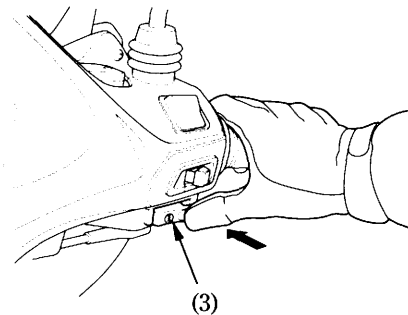

(3) Starter button