
# FEATURES (Not required for operation)

#### TRUNK SIDE POCKETS

The side pockets are located on both sides of the trunk. Open the lid, by pulling up the handle.

#### NOTE:

- The side pockets are for lightweight items. Do not carry more than 0.5 kg (1 lb) in each side pocket.
- Do not put sharp or hard objects in the side pockets, as these objects may interfere with the opening of the lid or may damage the side pockets.

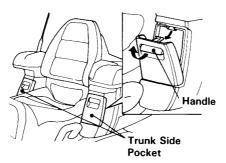

### WINDSHIELD HEIGHT ADJUSTMENT

The windshield height can be adjusted slightly to suit your riding preference.

## To adjust:

- 1. Pull the knobs outward and pull up the levers to release the windshield.
- 2. Move the windshield up or down to the desired position. Align the mark on the windshield with the upper edge of the instrument panel on each side.
- 3. Push down the levers to secure the windshield.

