


---

To drain the oil:

1. Remove the rear right side cover and the front right side cover (page 29), the oil filler cap and drain bolt.

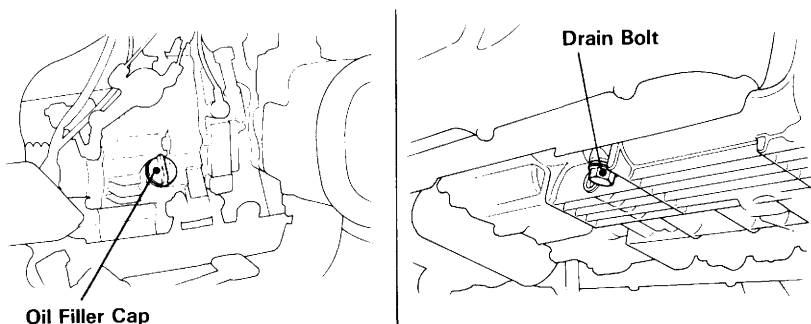

2. Remove the under cover and oil filter with a filter wrench. Discard the oil filter.

