

# MAINTENANCE

## FRONT WHEEL REMOVAL

Refer to the Maintenance Precautions on page 108.  
For related torque specifications, see page 123. The numbers indicate the sequence of disassembly.

