

PARTS LOCATION



Immobilizer system (HISS) indicator (red)

This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at (○) (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 50).



Low Fuel Indicator

Lights when there is only a few fuel left in the fuel tank. Amount of fuel left in the tank with the vehicle set upright is approximately;
4.4 l (1.16 US gal, 0.97 Imp gal)

Should also light for a few seconds and go off when the ignition switch is turned ON.



 
Fuel Gauge

Shows the approximate fuel supply available (page 19).



Coolant Temperature Gauge

Shows engine coolant temperature (page 19).



Digital Clock

Shows hour and minute (page 24).