
Air Temperature Meter

Push the DISP. button once to display the air temperature.

Temperature display

Below $-10\text{ }^{\circ}\text{C}$	“--” is displayed
Between: $-10\text{ }^{\circ}\text{C}$ – $50\text{ }^{\circ}\text{C}$	actual air temperature is indicated.
Above $50\text{ }^{\circ}\text{C}$	The display will remain and blink “ $50\text{ }^{\circ}\text{C}$ ”

The temperature sensor is located in the upper fairing. The temperature reading can be affected by heat reflecting from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an error in the temperature reading when your speed is under 30 km/h (19 mph).

23 °C

