

FEATURES (Not required for operation)

The RDS function turns on automatically when you turn the system on. If the station you are listening to is an RDS station, the frequency display will disappear and the station name will be displayed. Then, the system will automatically keep selecting the frequency with the strongest signal from the frequencies that carry the same programs. This can save you the trouble of re-tuning to obtain the same station as long as you are in the same RDS network area.

When the signals of the RDS station become so weak that the system can no longer follow the station, the system will hold the last tuned frequency and the display will change from the station name to the frequency.

In some countries, you cannot utilize features provided by RDS as the RDS function is not provided in all stations.

Program Service Name Display

If the station you are listening to is an RDS station, the frequency display will disappear and the station name information will be displayed.

