

PARTS LOCATION



Digital Clock

The display shows the hour and minute.


To adjust the time:

1. Turn the ignition switch to ON or ACC.
2. Push the MODE button two times. "CLOCK ADJUSTMENT" will display and the time on the digital clock will blink.
3. To set the hour, press and release the TRIP button until the desired hour appears.
 - Quick setting — push and hold the TRIP button until the desired hour appears.
4. To set the minute, press and release the DISP. button until the desired minute appears.
 - Quick setting — push and hold the DISP. button until the desired minute appears.
5. Once the time is selected, push the MODE button to enter the time.

Before Adjustment

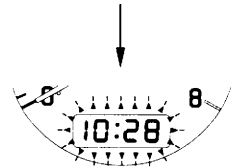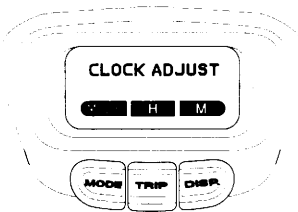

After Adjustment

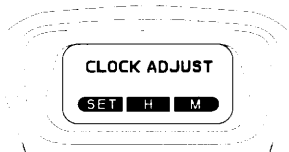

MODE button

TRIP button

DISP. button

