

MAINTENANCE

FUSE REPLACEMENT

Refer to the Safety Precautions on page 130.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.

NOTICE

Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

Recommended Fuses:

Main fuse A: 30 A

Main fuse B: 100 A

Speed limiter fuse: 70 A

Circuit fuses: 30 A, 20 A, 15 A, 10 A, 5 A

The fuse box (including spare fuses) is located behind the left side cover.

The main fuse is located in the fuse box.

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuses.
2. Remove the left side cover (page 137).
3. Remove the fuse box cover.

