

# Basic Operation

1. Turn the key to the 'ON' position.

2. Press the clutch lever.



3. Shift the scooter into the desired gear.

4. Release the clutch lever and apply throttle.

- Turn the key to the 'ON' position.
- Press the clutch lever.
- Shift the scooter into the desired gear.
- Release the clutch lever and apply throttle.