

Adjusting the Engine Idle Speed

The best way to assure proper carburetion is to see your Honda dealer for regularly scheduled servicing, including carburetor adjustment.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine's fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.


For information about high altitude carburetor adjustment, see “High Altitude Carburetor Adjustment”. ➤ P. 97

The engine must be at normal operating temperature for accurate idle speed adjustment. 10 minutes of stop-and-go riding is sufficient.

1. Warm up the engine, place the scooter on its center stand.
2. Open the seat. ➤ P. 33
3. Lock the rear brake. ➤ P. 24
4. Connect a tachometer to the engine.
5. Adjust idle speed with the throttle stop screw.

Idle speed: 2,000 ± 100 rpm

Under seat

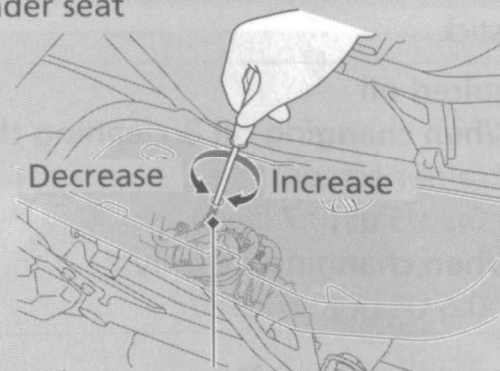

Throttle stop screw