

Vehicle Identification Number

The VIN and engine serial number uniquely identify your scooter and are required in order to register your scooter. They may also be required when ordering replacement parts. The VIN is stamped on the left side of the frame and also appears on the Safety Certification Label attached to the left side of the frame. The engine number is stamped on the back of the crankcase near the rear wheel. You should record these numbers and keep them in a safe place.

