


## Odometer/Tripmeter

The odometer (1) shows accumulated mileage.

The tripmeter shows mileage per trip. There are two tripmeters, tripmeter A (2) and tripmeter B (3).

Push the SEL button (4) to select the odometer, tripmeter A and tripmeter B.

To reset the tripmeter, push and hold the RESET button (5) when the display is in the tripmeter A or tripmeter B.

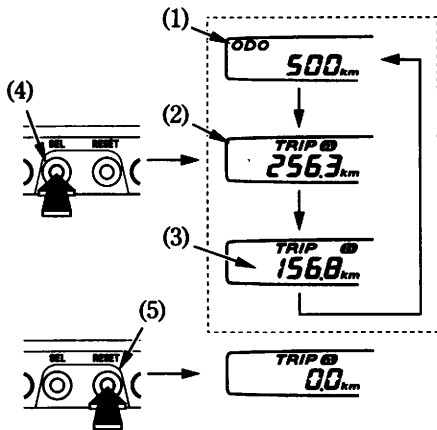

- (1) Odometer
- (2) Tripmeter A
- (3) Tripmeter B

- (4) SEL button
- (5) RESET button