


SEAT

Rear seat

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3) below the left side of the seat. Turn it clockwise, then pull the rear seat up and back.

To install the seat, insert the seat prongs (4) into the seat hooks (5) and insert the frame prongs (6) into the guide hooks (7). Thereafter, push down on the rear of the seat.

Be sure the seat is locked securely in position after installation.

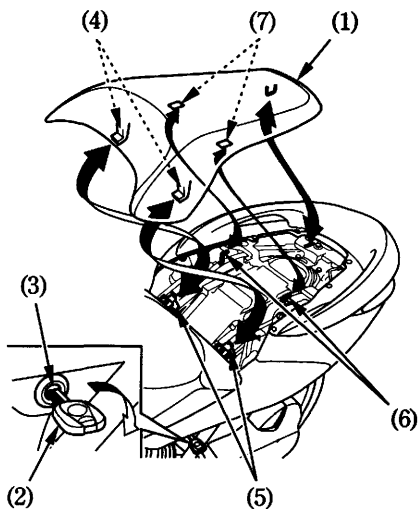

- (1) Rear seat
- (2) Ignition key
- (3) Seat lock
- (4) Seat prongs

- (5) Seat hooks
- (6) Frame prongs
- (7) Guide hooks