


REAR COWL

The right rear cowl must be removed to inspect the coolant reserve tank. The left rear cowl must be removed for battery maintenance.

The right and left rear cowls can be removed in the same manner.

Removal:

1. Remove the rear seat (page 71).
2. Remove the clips A (1) and rear center cowl (2).

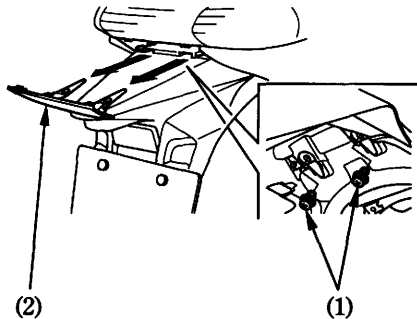

(1) Clips A

(2) Rear center cowl