


FINAL DRIVE OIL

Refer to the Safety Precautions on page 110.

Change the oil as specified in the maintenance schedule.

Change the oil with the final drive at normal operating temperature and the motorcycle upright on level ground to assure complete and rapid draining.

1. Remove bolt A (1), bolt B (2) and washer.
2. Pull out the prong (3) from the grommet (4), and remove the final gear cover (5).

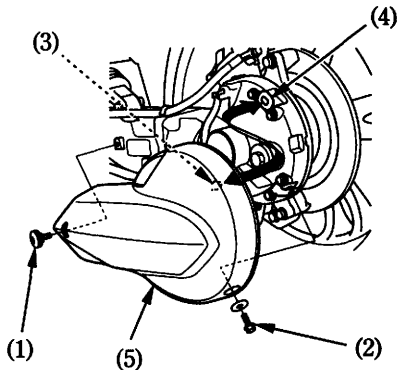

- (1) Bolt A
(2) Bolt B
(3) Prong

- (4) Grommet
(5) Final gear cover