

WHEEL REMOVAL

Refer to the Safety Precautions on page 110.


Front Wheel Removal

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

1. Park your motorcycle on a firm, level surface.
2. Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.
3. Remove the right and left caliper assemblies (1) from the fork leg by removing the fixing bolts (2).

When removing and installing the wheel, be careful not to damage the sensor and pulser ring.

To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

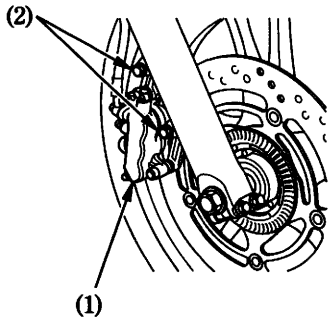

- (1) Brake caliper assembly
(2) Fixing bolts